

# Voidstar Lab

## Scramrod Assembly Guide

How to assemble your Scramrod tactical jam-clearing ramrod from Voidstar Combat Sports.

Written By: Zack Freedman



## INTRODUCTION

Thanks for buying a Voidstar Combat Sports Scramrod! Whether your platform is belt or MOLLE, this guide will show you how to build the only collapsible ramrod for Nerfing.



### TOOLS:

- [Super Glue \(optional\)](#) (1)




### PARTS:

- [Handle Segment](#) (1)
- [Rod Segment](#) (5)
- [End Segment](#) (1)
- [Toggle](#) (1)
- [Case \(MOLLE or belt\)](#) (1)
- [Endcap \(optional\)](#) (1)
- [12" Shock Cord](#) (1)
- [24" Shock Cord](#) (1)




## Step 1 — Getting Started

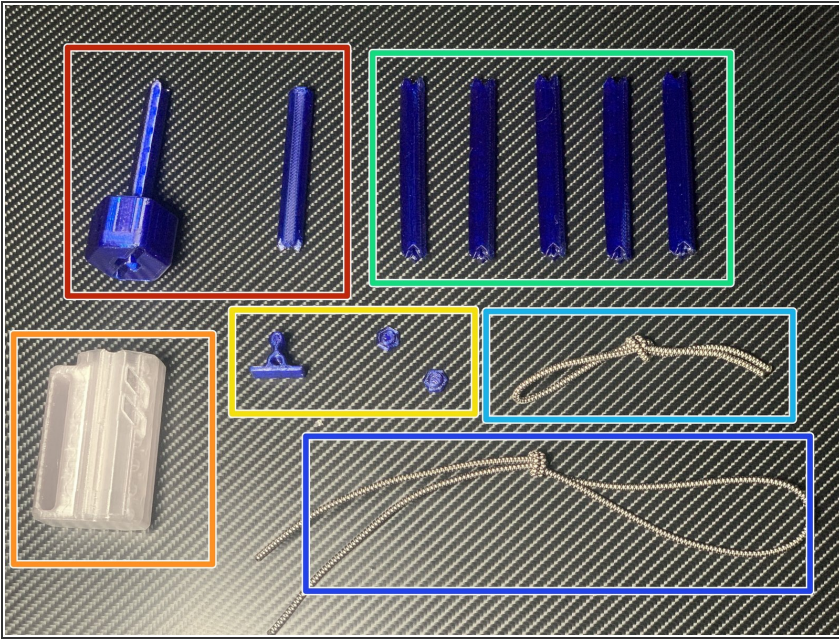

- Let's take inventory. Your Scramrod includes:
  - Handle segment and end segment
  - Five middle segments
  - Case, either MOLLE or belt-mounted. This guide uses a belt-mounted case, but the instructions are the same for MOLLE.
  - Toggle and endcaps
  - 12" shock cord
  - 24" shock cord
- If you'd like to install the endcaps for a tidier appearance, you'll also need some glue like Zap-a-Gap or E-6000. Gorilla Glue won't work.

## Step 2 — Full Cord Press

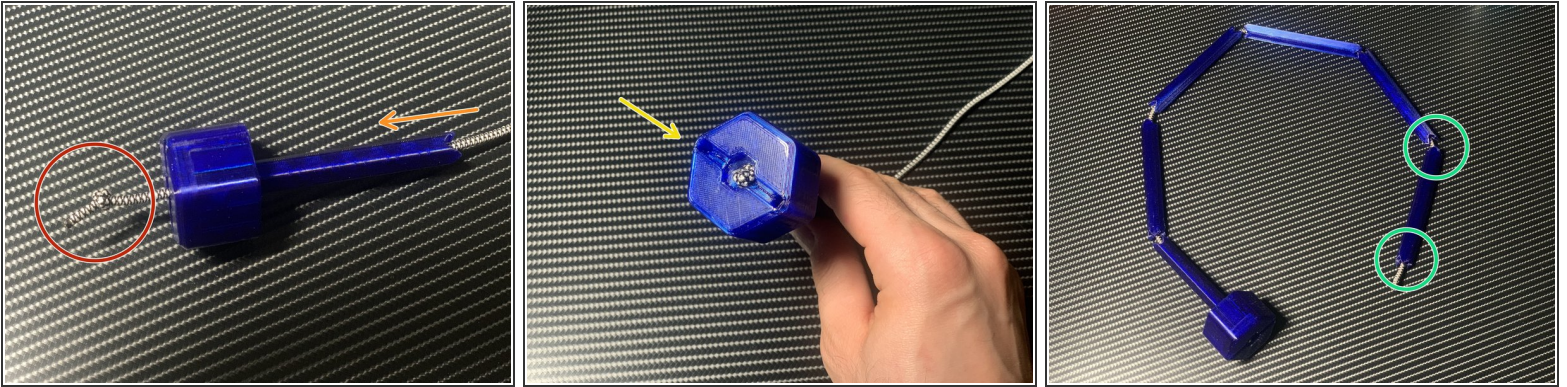


- Thread the 24" cord through the handle.
- Tie a single knot as close to the end as possible, and pull it tight.
- Tuck the free end of the knot into the handle and pull the entire knot into the handle.

**⚠ Don't pull too hard - you can break the handle. You may want to use a screwdriver or something to gently press it in.**

- Thread the five rod segments onto the cord. All five have spikes on both ends.




### Step 3

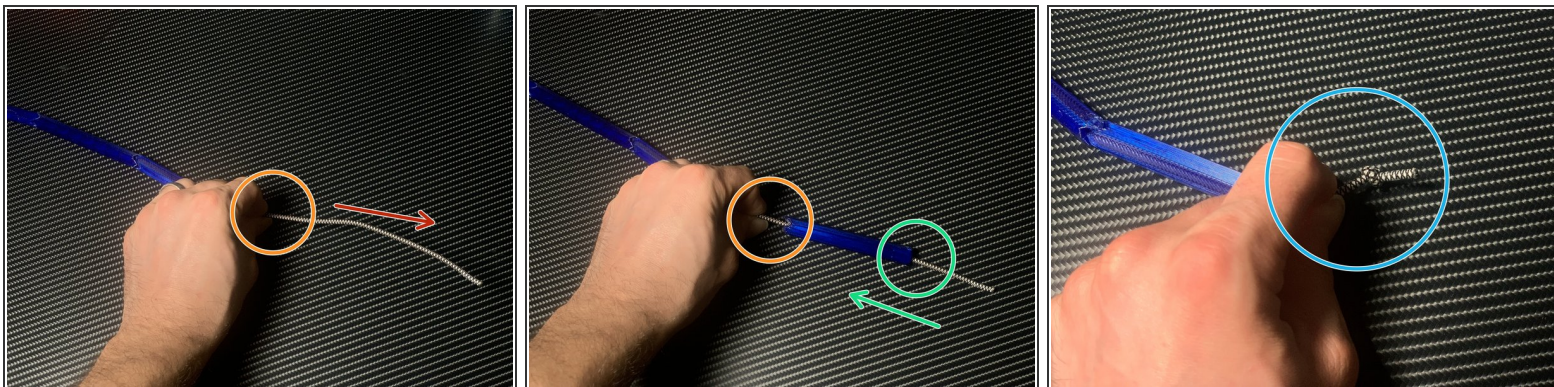

- Pull the cord nice and tight.
- Pinch and hold the cord where it leaves the rod segment.
- Thread the end segment onto the cord. Note that the cord should poke out of the blunt end, not the spiky end.
- Tie a single knot on the cord as close to the end as possible, and pull it tight.


### Step 4 — Tidying Up

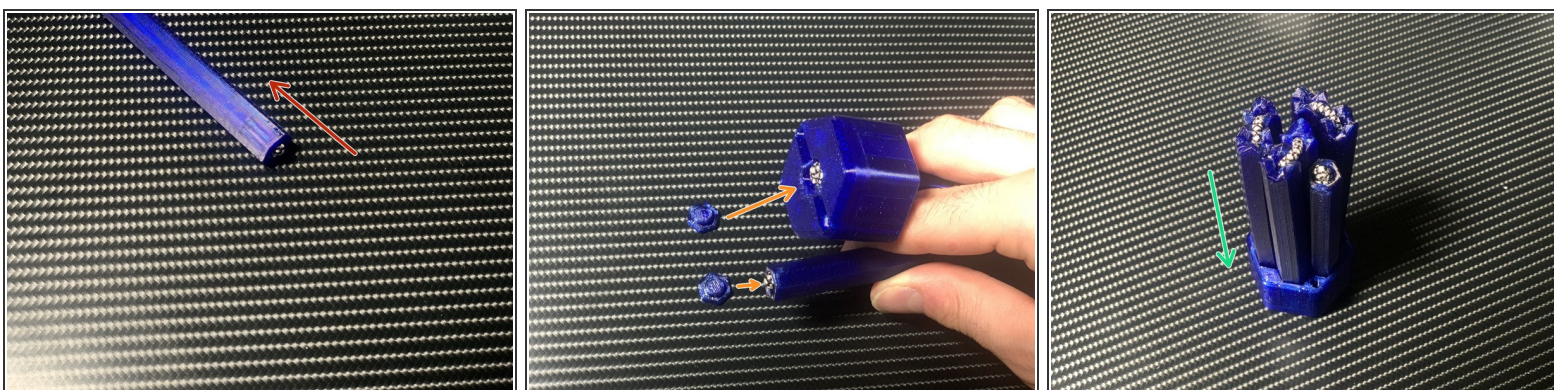

- Tuck the exposed ends of the cord into the segments. Gently push the knots in with a screwdriver or something.
- If desired, glue the endcaps over the exposed ends, and allow the glue to dry. These aren't necessary, but they look neat.
- Fold the Scramrod up and nest the segments into the handle.




## Step 5 — Retaining Cord

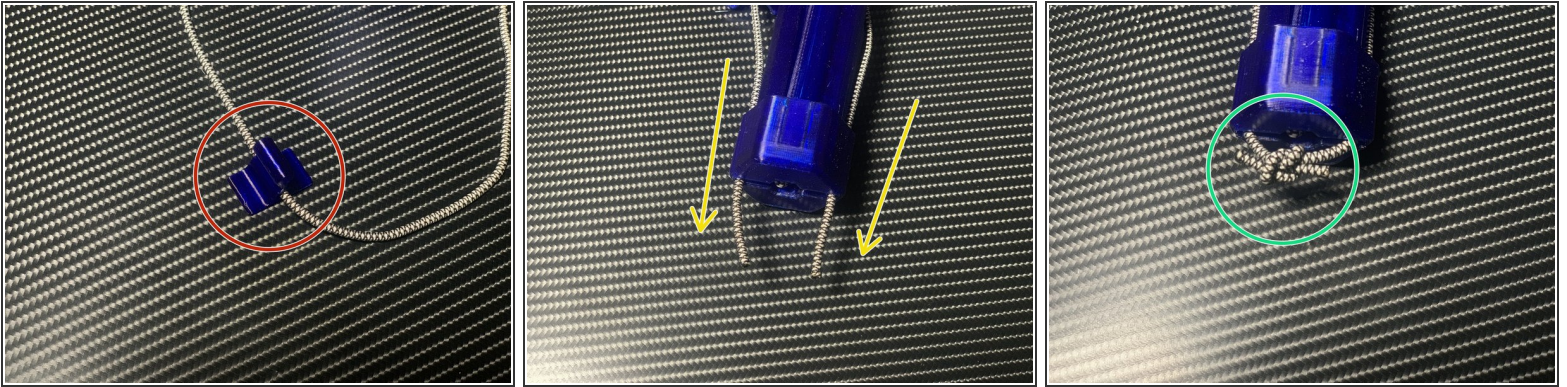

- Thread the toggle onto the 12" shock cord.
- Thread each end of the shock cord through the holes in the handle. Note the orientation!
- Tie the exposed ends in a loose square knot. Don't tighten it yet!

## Step 6

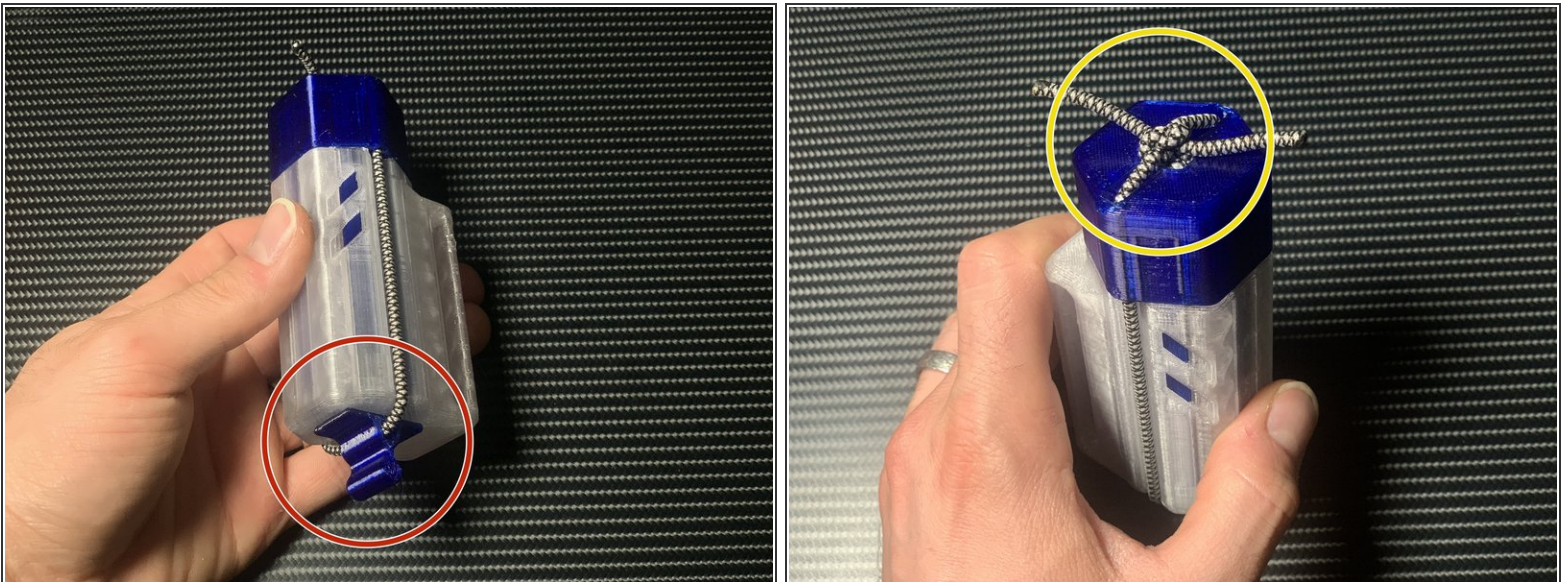

- Insert the ramrod into the case and put the toggle flat against the bottom.
- Tighten the knot so the ramrod is held securely, but the toggle is easy to pull away.
- You're done! Go clear some jams!

Thanks for buying, and building, a Voidstar Combat Sports Scramrod! Nerf on!